無印良品

タグツール･アラームクロック

取扱説明書

シリコーンケースに入れて持ち運べる、旅に便利な単機能の道具です。
＊タグツール・シリコーンケース（別売）に入れてご使用ください。

●お買い上げいただきありがとうございました。
●ご使用前に、この取扱説明書を必ずお読みのうえ、正しくお使いください。
●この取扱説明書は必ず保管してください。

付属品
ボタン形リチウム電池 CR2032　1個
取扱説明書（本書）　1部

保証書付

取扱説明書番号　8ZDA28AZ（Y1403）

保証書

製品名　タグツール･アラームクロック

お買い上げ日　　年　　月　　日

お客様 お名前

お客様 ご住所

TEL

保証書貼付用レシート貼付欄

〔保証期間〕お買い上げ日より1年以内

日本国内のみ有効です。
This warranty is valid only in Japan.

●レシートが未貼付の場合は無効です。
●ネットストアご購入の場合、お買い上げ日シール（店舗印）の同梱はございません。お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認をお願い申し上げます。

■保証について

通常のお取り扱いで万一機械故障が生じました場合、保証期間中に下記までこの保証書を添えてお申し出下されば無料にて修理･調整いたします。ただし、次の場合は保証期間内でも有料修理になりますのでご了承ください。
（ご使用の際はこの取扱説明書を必ずお読みください。）

1）誤ったご使用による故障、またはお取扱いの不注意による故障
2）不適当な修理や改造による故障
3）火災または天災による故障
4）ご使用中に生じる外観上の変化（ケースの傷など）
5）本保証書のご提示がない場合（電池は保証の対象外です。）
6）修理の際、外観の違う代替品を使用させていただくこともありますのでご了承ください。

●この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。この保証書によってお客様の法律上の権利を制限するものではありません。

株式会社　良品計画
〒170-8424　東京都豊島区東池袋4-26-3
お客様室　0120-14-6404
平日10:00 ～ 21:00　土･日･祝 10:00～18:00

輸入元 リズム時計工業株式会社
〒330-9551　埼玉県さいたま市大宮区 北袋町１丁目299番12
お客様相談室　0120-557-005
受付時間 9:00 ～ 17:00 土日、祝日、年始年末、夏季休日を除く

⚠警告 小さなお子様の手の届く所に置かない

製品や電池、電池ぶたなどを口に含んだり誤飲するおそれがあります。万一、飲み込んだときは、すぐに医者の治療を受けてください。

＊図は操作説明用ですので、実際の商品と異なることがあります。

1. 各部の名称

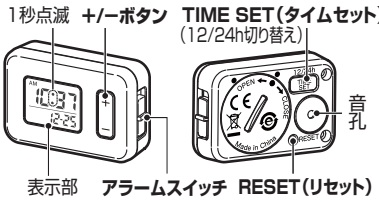

2. 電池のセット（電池の交換）

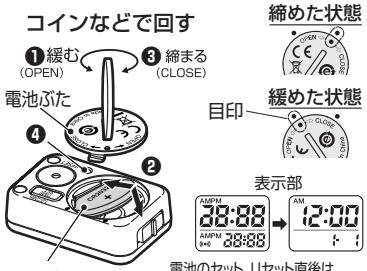

電池のセット、リセット直後は2014/1/1、AM12:00、アラーム時刻はAM6:00に設定される。

ボタン形リチウム電池　CR2032　1 個使用

❶電池ぶたを左に回して取る。
❷電池の+表示を上にして入れる。
❸電池ぶたを右に回して締める。
❹**RESET**を楊枝などで押す。

※電池をセットしたとき、RESETを押したときに「ピィ」と鳴ります。

※電池が取り出しにくいときには、すきまに楊枝など細い棒を差し込んで、電池を持ち上げてください。
※金属製のピンセットを使用しないでください。電池がショートすることがあります。

⚠注意 防塵、防水仕様ではありません。

水に濡れたりすると故障の原因になります。

3. 日時のセット

時、分、西暦、月、日の順にセットします。点滅している数値を＋または－で合わせ、TIME SET を押すと次に進みます。

押してすぐ離す　押し続ける
＋　1つ進む　早送り
－　1つ戻る　早戻し

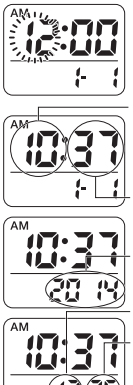

❶TIME SET を約3秒間押すと「ピィ」と鳴り、「時」が点滅。
❷「時」を合わせる。
❸「分」を合わせる。
❹「西暦」を合わせる。
❺「月」を合わせる。
❻「日」を合わせる。
以上でセットが終わりました。

※❻の設定が終わると時を刻み始めます。
※60秒間操作を中断すると表示されている内容で設定を終わり、時を刻み始めます。

故障かな?

■ 表示が欠けている

静電気の影響で誤作動した可能性があります。電池を取り出して、入れ直してください。また、電池の残量が少なくなると表示が薄くなったり、欠けたりします。電池を新しいものに交換してください。

■ 表示が薄いまたは濃い

液晶表示は、0℃未満では薄くなったり、消えたりします。40℃を超えると濃くなったり、むらになったりします。0～40℃の温度になれば正常に表示します。

4. アラーム時刻のセット

●アラームが鳴っているときは、設定できません。アラームスイッチをOFFにしてください。

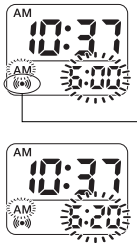

❶＋または－を押して離すと、アラーム時刻が点滅します。12時間表示のときはAMまたはPMが点滅します。

アラーム時刻のとき 表示

❷＋または－を押して時刻を合わせてください。
❸約5秒間ボタン操作をしないと設定を終わります。

5. アラームのON/OFF

ON：セットした時刻にアラームが鳴る。
OFF：アラームを止める、鳴らさない。

○鳴っているアラームを2分間放置するとアラーム音が止まります。（**アラームオートストップ機能**）
○アラームスイッチがONのときは、毎日アラームが鳴ります。使用しないときはOFFにしてください。

6. 時刻表示の切り替え

12時間表示　24時間表示

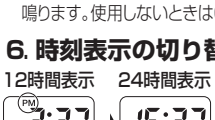

AM 12:00～11:59
PM 12:00～11:59
00:00～23:59

12/24h TIME SET を押してすぐ離すと12/24時間表示が切り替わります。

●日時、アラーム時刻のセット中、アラームが鳴っているときは切り替えができません。

お手入れについて

●汚れがひどいときは、水でうすめた中性洗剤や石けん水を、やわらかい布に少量つけてふき取り、その後、からぶきしてください。
●ケースなどの汚れ落としに、ベンジン、シンナー、アルコール、スプレー式クリーナー類は、使用しないでください。

安全上のご注意

よくお読みのうえ、必ずお守りください。

図記号の説明
⃠は、禁止（してはいけないこと）を示しています。
❗は、指示する行為を必ず守ることを示しています。

⚠警告 死亡または重傷などを負う可能性が想定される内容

電池の液漏れや発熱、破裂を防止するために、次のことを守る

●電池をショートさせない。●分解しない。
●電池に傷をつけない。●電池を充電しない。
●電池を加熱しない。●火の中に入れない。

電池から漏れた液に触れない

●失明や炎症などの障害が発生する危険性があります。目や皮膚についたら、すぐに水道水でよく洗い流して医師の治療を受けてください。衣服に付着した場合は、すぐに水道水で洗い流してください。
●漏れた液に直接触れないでください。電池を外して、漏れた液を布や紙でよくふき取ってください。修理が必要なときは、お買い上げの販売店にご相談ください。

⚠注意 傷害を負う可能性または物的損害が発生する可能性が想定される内容

強い振動や落下など衝撃を与えない
故障や破損の原因になります。

ぬれた手で触らない
さびの発生や故障の原因になります。

浴室やサウナ、岩盤浴、温室など、高温・高湿になる所では使わない
さびの発生や故障の原因になります。

分解や改造をしない
けがや故障の原因になります。

下記のような場所では使わない
部材の変形、変質、劣化、故障の原因になります。

●直射日光が当たる所。
●暖房器具等の熱風や火気に近い所。
●温度が+50℃以上の所。
●温度が－10℃以下の所。
●ほこりが多く発生する所。
●プール、温泉場などガスの発生する所。
●調理場など多くの油を使用する所。
●ゴムや軟質のポリ塩化ビニルに長い間、直接ふれさせておくと、色移りや付着、変質をすることがあります。

電池からの液漏れを防ぐために次のことを守る

●使い切った電池は速やかに取り出してください。
●長期間使用しない場合は、電池を取り出してください。

電池の寿命について

●付属の電池は、工場を出荷するときに入れていますので、製品仕様より短い期間で電池切れになることがあります。
●**年1回定期的に新しい電池に交換してください。**

電池、製品の廃棄について

●お住まい地区自治体の指定に従ってください。
●電池と本体を分別して廃棄してください。

製品仕様

使用環境温湿度	－10～+50℃、85%RH以下 ※結露しないこと
液晶表示可読温度	0～+40℃
電源	CR2032（3V）1個
電池寿命	約1年　アラームを30秒/日鳴らしたとき
時計機能	クオーツ
表示方法	LCD表示（12/24時間表示切り替え式）
時間精度	平均月差 ±30秒（温度が5～35℃のとき）
アラーム機能	設定時刻にアラームが鳴る
アラーム精度	表示時刻に対して±0秒
アラームオートストップ	2分
アラーム音	電子音　鳴り方が４段階で変化
カレンダー	2014/1/1～2099/12/31
外形寸法	46（幅）30（高さ）13（厚み）mm
質量	17g（電池を含む）
材質	ケースABS/透明カバーPMMA
防水機能	なし

○製品仕様は改良のため予告なく変更することがあります。

MUJI

TAG TOOL•ALARM CLOCK

User's Manual

Product is a travel-friendly, single function tool which may be kept inside a silicon case and carried.
* Please use the product together with TAG TOOL•SILICON CASE (sold separately).

- Thank you for your purchase.
- In order to use this product properly, please first read this User's Manual before use.
- Please keep this User's Manual stored in a handy location even after reading it, and refer to it when necessary.

Accessories

Type CR2032 button cell Lithium batteries	1
User's Manual (this sheet)	1 page

User's Manual number 8ZDA28AZ (Y1403)

CE This product complies with the EMC requirements of the European Community.

The symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.
Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

Safety advice

Prior to use, please thoroughly read and follow these safety instructions.
Explanation of symbols
⃠ This symbol indicates prohibited conduct.
❗ This symbol indicates compulsory items.

⚠WARNING WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

In order to prevent leakage of liquid, over-heating or rupture of battery, please obey the following.
Prohibited
- Do not short-circuit the batteries.
- Do not disassemble.
- Do not damage the batteries.
- Do not re-charge the batteries.
- Do not heat the batteries.
- Do not expose to fire.

Do not touch the liquid leaking from the batteries.
- It poses the risk of injuries such as loss of eyesight or inflammation. If the liquid comes into contact with eyes or skin, wash immediately with tap water and seek treatment from a doctor. If the liquid is attached to clothing, please wash it off immediately with tap water.
- Do not touch the liquid directly. Remove the batteries and wipe the liquid off thoroughly with cloth or paper.

⚠CAUTION CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Do not drop or subject the product to strong impact.
Prohibited This may cause damage or malfunction.

Do not touch with wet hands.
This may cause rust or malfunction.

Do not use in locations with high temperature and humidity, such as in a bathroom, sauna, bedrock bath or greenhouse.
This may cause rust or malfunction.

Do not perform repairs, disassembly or modifications.
Disassembly prohibited This may cause injury or malfunction.

Do not use the product in the places listed below.
Prohibited This may cause the product to deform, deteriorate, or malfunction.
- Locations exposed to direct sunlight.
- In the proximity of fire or heat from heating appliances.
- Locations with temperatures above +50°C (+122°F).
- Locations with temperatures below -10°C(+14°F).
- Locations where there is a lot of dust.
- Locations with a lot of gas such as swimming pools or hot springs.
- Locations where a large quantity of oil is used such as toasters, microwave ovens, electronic cookers, or ventilation hoods.
- Direct contact with rubber or polyvinyl chlorides for long periods may cause the product to stain, stick or deteriorate.

In order to prevent leakage of battery liquid, please obey the following.
Compulsory
- Please remove the batteries from the product when it has run out.
- Please remove the batteries when the product is not being used for a long period of time.

Regarding battery life

- As the batteries are inserted at the time of shipment from the factory, there are cases when the battery life is short.
- Please regularly replace with new batteries once per year.

Disposal of batteries and product

- Please dispose of the batteries and the body separately according to the local rules.

Specifications

Usable temperature and humidity range:	-10°C ～+50°C (+14°F ～+122°F), 85%RH or less *No condensation
LCD operating temperature range:	0°C～+40°C (+32°F～+104°F)
Power source:	CR2032 (3V) 1
Battery life:	Approx. 1 year when the alarm rings for 30 seconds/day
Clock function:	Quartz
Display:	LCD display (Switchable between 12/24-hour display modes)
Time Accuracy:	Average monthly difference within ±30 seconds (when temperature is between +5°C ~ +35°C (+41°F ~ +95°F))
Alarm function:	Alarm will ring at the set time
Alarm accuracy:	±0 seconds against displayed time
Alarm auto-stop:	2 minutes
Alarm Sound:	Electronic sound Alarm sound changes in 4 levels
Calendar:	2014/1/1 ~ 2099/12/31
Size:	4.6cm wide x 3cm high x 1.3cm thick (1.8in wide x 1.2in high x 0.5in thick)
Product weight:	17g/0.04lb (including batteries)
Materials:	Case ABS / Transparent cover PMMA
Waterproof function:	NONE

○Product specifications are subject to change without prior notice for the sake of making improvements.

⚠WARNING **Keep product out of the reach of small children.**
It may cause accidental swallowing of the product, battery or the battery cover. If accidental swallowing occurs, please seek treatment from a doctor immediately.

⚠CAUTION **Product is not waterproof or dust-proof.**
Getting the product wet may cause malfunction.

* Image is for the purposes of operating instructions, and may vary from actual product.

1. Part names

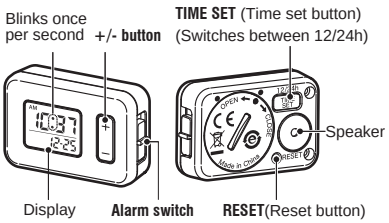

2. Setting the battery (exchanging the battery)

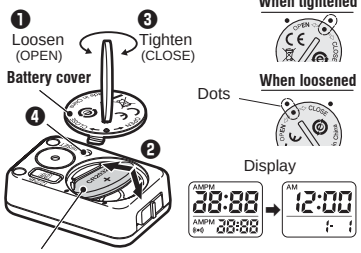

Insert the battery diagonally with the + sign facing up before pushing it in place.

Immediately after setting the battery or pressing the Reset button, the clock will be set to 2014/1/1, AM12:00, and alarm time will be set to AM6:00.

1 Type CR2032 button cell Lithium battery will be used.

❶ Remove the battery cover by turning it in an anticlockwise direction.
❷ Insert the battery with the plus(+) sign facing up.
❸ Tighten the battery cover by turning it in a clockwise direction.
❹ Press "RESET" with a thin stick such as a toothpick.
※ Setting the battery or pressing the "RESET" button will sound a "beep".
※ If you have difficulty removing the battery, please insert a thin insulating rod such as a toothpick to lift the battery from the compartment.
※ Please do not use metallic pins. The battery may short circuit.

3. Setting the date/time

Setting will be done in the following order: hour, minute, year, month, date.
Press + or − to adjust the figure in the blinking field, and press TIME SET to move to the next field.

Press and release	Press and hold
+ Increases by 1	Fast forward
− Decreases by 1	Reverse

❶ Press the TIME SET button for approx. 3 seconds until a "beep" sound is heard. The "hour" field will start blinking.


❷ Set **"Hour"**
Beware of the AM(before noon) /PM(after noon) display when in 12-hour display mode.

❸ Set **"Minute"**

❹ Set **"Year"**

❺ Set **"Month"**

❻ Set **"Date"**

※ **Clock will start counting the time after the setting of ❻ is completed.**

※ If you do not operate any buttons for 60 seconds, the date/time setup will automatically end, and the clock will start counting with the displayed fields.

Troubleshooting

■ Portions of display missing

The display may have malfunctioned due to static electricity. Please remove and insert the battery again. Low battery levels may also cause the display to become dim or have missing portions. Please replace with brand new battery.

■ Display is dim/too dark

Liquid crystal displays may dim or disappear at temperatures below 0°C (+32°F). At temperatures above +40°C (+104°F), the display may become darker or distorted. Display will function normally between the temperature range of 0°C ~ +40°C (+32°F ~ +104°F).

4. Setting the alarm

•Setting cannot be done while the alarm is ringing. Please turn the Alarm Switch OFF.

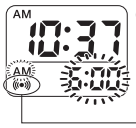
❶ Press and release + or − . The alarm time will start blinking. In 12-hour display mode, AM or PM will start blinking.
((•)) will be displayed at alarm time

❷ Set the time by pressing + or −.
❸ If you do not operate any buttons for approx. 5 seconds, the setup will automatically end.

5. Turning the alarm ON/OFF

O N Alarm will ring at the time set.
OFF Stops the alarm, stops the ringing.



•Alarm will stop after ringing for 2 minutes. **(Alarm auto-stop function)**
•The alarm will ring everyday if when the Alarm Switch is ON. Please set it to OFF when not in use.

6. Switching time display mode

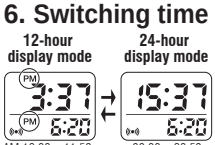

Press and release the 12/24h TIME SET button to switch between 12/24 hour display modes.

•Cannot be switched during date/time or alarm time setup, or while the alarm is ringing.

Concerning maintenance

- If the exterior of the body becomes dirty, remove the dirt by wiping with a cloth slightly dampened with water-diluted neutral detergent, and clean with a dry cloth afterwards.
- Never use benzene, paint thinners, alcohol or spray cleaners or other solvents to remove the dirt on the case.